


Introduction

An update to your Cashmaster Printer One has been released. The update is installed using a USB flash drive, which must first be loaded with the supplied update files.


Pre-requisites

Please ensure your scale has a minimum 50% battery charge level and is connected to the mains power supply.

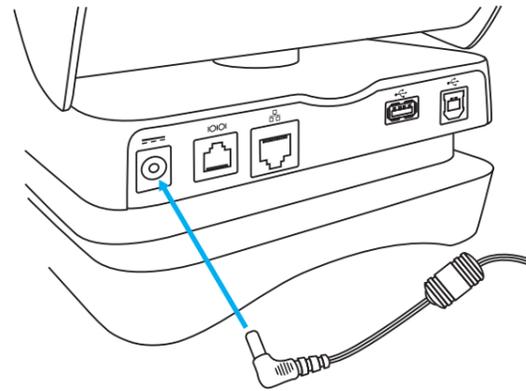

Step 1: Prepare USB flash drive

- 1.1 Insert an empty USB flash drive into your PC's USB port.
- 1.2 Save the update ZIP file that you have received to your PC - for example, on to your Desktop.
- 1.3 Open the ZIP file, and copy all of the contents (including the Printer_firmware folder) to your USB flash drive.

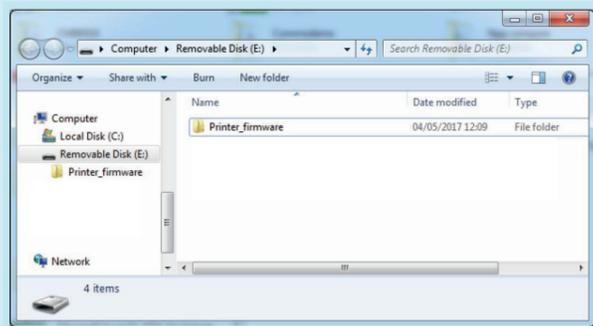


- 1.4 The USB flash drive is now ready to update the Cashmaster One product.



Step 3: Update printer bootloader and firmware

- 2.1 Press the main power key to switch on your unit if necessary.
- 2.2 Ensure the main system battery level is above 50% before proceeding.
- 2.3 Insert the USB flash drive – the USB flash drive icon will appear in the status bar.

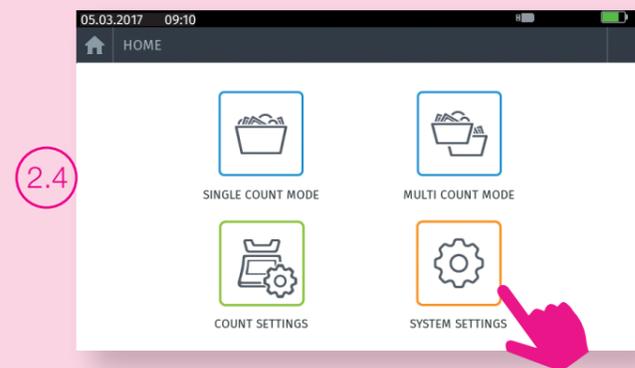


2.4



2.5

2.6

2.7

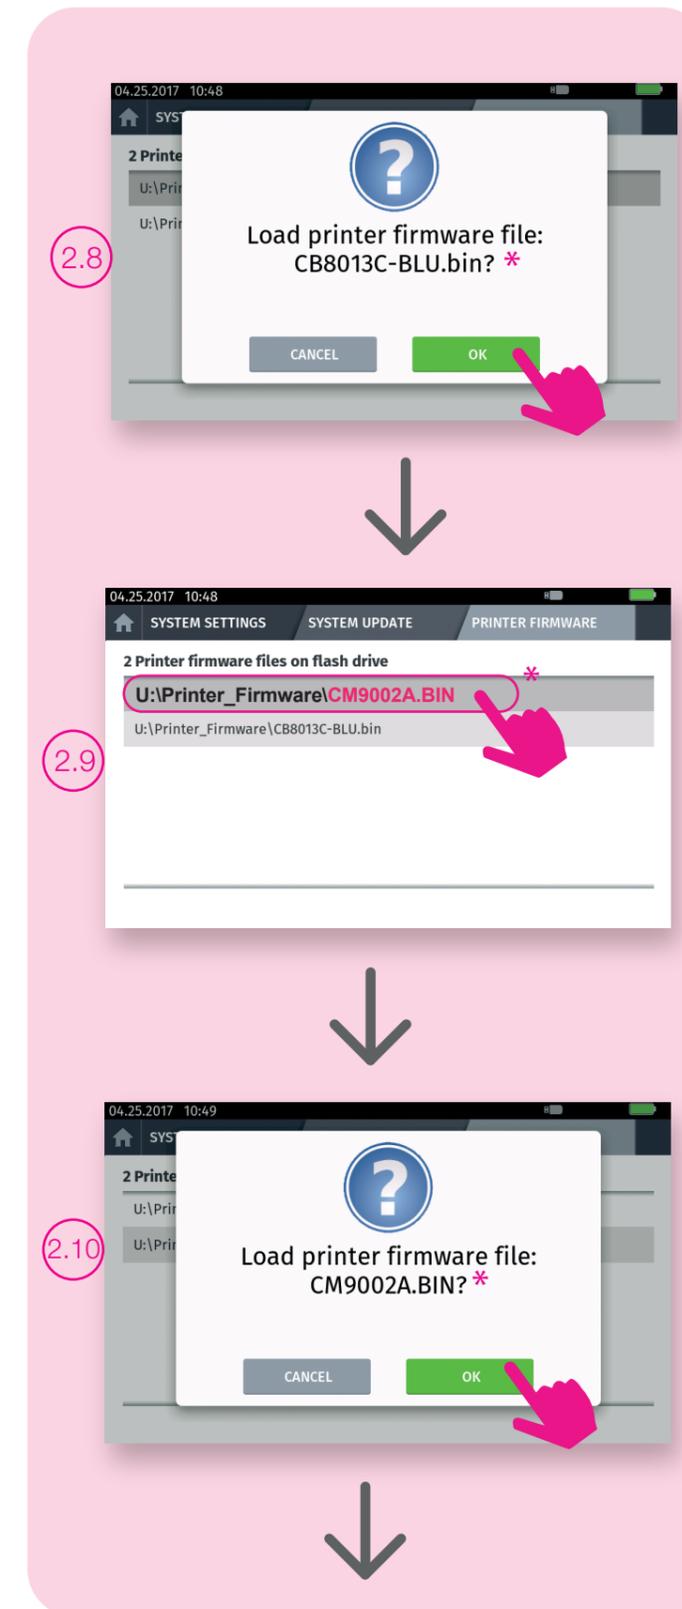

2.8

2.9

2.10


* The software numbers are provided as an example only.

Product Firmware Update


Cashmaster *printer one*

Step 3: Verification

3.1

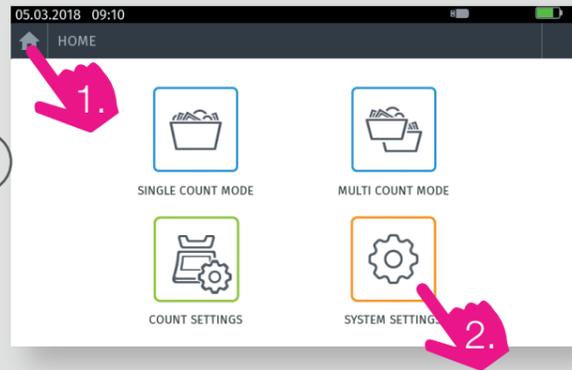

3.2

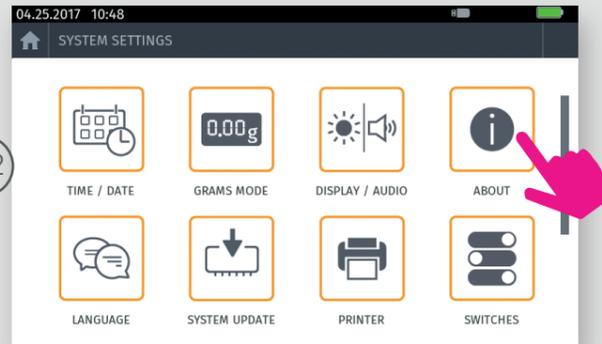

3.3 Verify the following parameters:

Cashmaster Printer One: Connected
Bootloader: CB8013C *
Firmware: CM9002A *

3.4 Congratulations! Your Cashmaster One is updated!
You can now remove the USB flash drive and press the 'HOME' button to return to the home menu.

GLOBAL SUPPORT

North America
t: +1 877 227 4627
e: enquiriesusa@cashmaster.com

Germany
t: +49 (0) 2463 999 339
e: germany@cashmaster.com

Hong Kong and Asia
t: +852 2157 9363
e: enquiriesasia@cashmaster.com

UK and all other customers
t: +44 (0) 1383 410 121
e: support@cashmaster.com

cashmaster.com

* The software numbers are provided as an example only.